

Camera Instructions



HOW TO TAKE A VIDEO

1. Start with the camera off.
2. **Press** the power (on/off) button. This turns the LED and the camera on.
3. **Press and hold** the mode (video/shutter) button. The LED flashes 3 times then the LED goes off. The camera is recording video and audio.
4. **Very quickly press** the mode button to stop video recording. The video recording stops, the video is written to a AVI Flash memory file, and the LED turns on. Repeat step three to take another video.

5. **Press and hold** the power button. The camera and the LED turn off.

HOW TO TAKE A PHOTO

1. Start with the camera off.
2. **Press** the power button. This turns the LED and the camera on.
3. **Very quickly press** the mode (video/shutter) button. The LED briefly goes off, then on. The camera took a photo and wrote it to a JPG Flash memory file. Repeat step three to take another photo.
4. **Press and hold** the power button. The camera and the LED turn off.

CHARGING THE CAMERA

1. Start with the camera off.
2. Connect the USB cable to the camera and to a computer.
3. The LED goes on indicating charging.
4. The LED goes off indicating a full charge.

FILE STORAGE

1. Start with the camera off.
2. Connect the USB cable to the camera and to a computer.
3. Open Exploring in Windows or My Computer
4. Browse to the Camera's drive letter. (Example E:)
- 5: Open the **DCIM** folder then the **100MEDIA** folder.
- 6: Videos are stored here in the **.AVI** format
- 7: Still Photos are stored here in the **.JPG** format
- 8: These files can be Cut, Copied, or Deleted from here.

SETTING DATE AND TIME

1. Start with the camera off.
2. Connect the USB cable to the camera and to a computer.
3. Open Exploring in Windows or My Computer
4. Browse to the Camera's drive letter. (Example E:)
- 5: Open your Notepad program or other text editor.
- 6: Type the following three separate lines substituting correct date and time:

```
[date]  
2011/01/01  
16:24:00
```

- 7: Save File to the root of the camera drive. (Example E:) With the file name: **tag.txt**
- 8: Unplug the USB cable and power the camera ON
- 9: It will read the file and set the clock.

NOTES:

1. Camera has been tested prior to shipping and is in working order.
2. Camera includes a 2GB MicroSD card. Not all MicroSD cards are the same. The higher quality cards produce less dropped frames and a better video rate due to there quicker read/write times.
3. Even though the camera will accept up to an 8GB Micro SD card. I have found that the battery life will only permit about 50 minutes of record time. This results in about a 4GB video file. Your results may vary.
4. NO WARRANTIES IMPLIED

