

CU 5000

Air-conditioner Remote Control's CU 5000 Air-conditioner Remote Control's Pilot Multi-Function Air-conditioner Remote Control user's Guide

Product Description

Thank you for choosing this universal remote control. CU5000 is a universal AC remote control and a high-tech product with several patents of invention which is invented by our engineers. Whether summer or winter, you could enjoy comfort just by one key.

Cu5000 is a universal remote with 4000 in 1, you could use it for 98 percent air-conditioner in the world. In addition, the remote also has clock, timer on and off, room temperature, conversions between celsius and Fahrenheit degree, So it's your best choice of replacement.

Please read this manual and set your remote for your brand before using and we hope it will help you to use this remote.

Setting of remote

Open the slide cover, put 2 AAA batteries as per polar indicated on the battery cabin. Pull on the slide cover and all the function buttons appears. Set your remote with one of the following methods.

1, Patent code setting up

1) Find out the required code from brand code list. If one brand has several groups of codes, you should try the first group. If it doesn't work, try the second and to this analogizes until the remotes operates your equipment.
Ex: AUCMA, you can choose 0288, if it dose not work, please try the 0289 etc.

2) Press "S" key to enter the 4 digits code in turn. Ex: "0288", press "0" first, and then press "2", "8" and "8" in order, the number you entered will be blinking on the screen, wait for the number to stop blinking and then enter the next number. The remote controller will automatically confirm the code setting once all 4 numbers have been entered.

3) Press "Touch" Key, the air-conditioner works. If it does not work, try "0289" follow above instruction until thair-conditioner works.

2. Auto—search code setting

If you do not know the brand of your air conditioner, or if your brand is not listed in the code table, try searching for your code as follow:

1) Put the remote to aim at your air conditioner, press and hold "S" key for five seconds. The remote is entering the au-search status, launch the signal continuously, the code blinking and increasing. When the air conditioner receives the signal, and sends a BUZZER, press any keys confirm.
Note: please press the keys as quickly as you listen to the buzzer, otherwise, you would miss the correct code.

2) Put the remote to aim at your air conditioner again, press "Touch" Key, the air conditioner works and setting finishes. Otherwise you have to set again using above methods.

Function indication

1. Touch Key function Press "Touch" key to turn on the unit, there is a room temperature sensor located inside the remote controller to detect the room temperature, if the room temperature is higher than 20°C/68°F, the unit will run in the cooling mode to cool down the room, if the room temperature is lower than 20°C/68°F, the unit will run in the heat mode to warm up the room. You can always adjust your desired temperature by pressing the "UP" button or the "DOWN" button if you feel too hot or too cold.

Function indication

2, Clock set up

- 1) Press the "CLOCK" button, it is blinking.
- 2) Press the TIME "+" or "-", setting to the current time.
- 3) Press the "CLOCK" button again, stop blinking, the time setting is complete. (If you did not press the "time" button, it can be setting automatically after 5 seconds)

3, TIMER ON AND OFF

No matter whether the air conditioner on or off you could set the timer on and off at the same time.

- 1) Press the "TMR on" button, the LCD displays the clock signal and time blinking. Press TIME "+" "-" button, adjust to the required time, and it will confirm the time of turn on after 5 seconds.
- 2) Press the "TMR off" button, the LCD displays the clock signal and time blinking. Press TIME "+" "-" button, adjust to the required time, and it will confirm the time of turn off after 5 seconds.

Note:

- 1) The time frame can be set between 00-24 hours;
- 2) Press the "timer on" or "timer off" two times continuously, cancels the timing.
- 3) After timing setting, the launch direction of remote control must be aimed at the receive direction of your air conditioner in the effective distance, otherwise the timing setting will be ineffectively.

4, Conversions between Celsius and Fahrenheit degree

People used to the Celsius degree, just press the "C/F", remote will convert the display between Fahrenheit and Celsius degree and display it, and it works both ways.

5. Thermometer function

Except the setting temperature, it also can display the room temperature, so you could use it as a thermometer, offering convenience for controlling the temperature anytime. It could be automatic Fahrenheit and Celsius degree transformation by pressing "C/F"

Attention

1, If it is not used for a long time, remove the battery to avoid leakage liquid of the battery to damage the machine. When the LCD looks dim, please change batteries. (New and old batteries can not be used together) After the batteries are replaced every time, it is not necessary to set model code again.

2, As usual the LCD only displays the time when pressing model codes "Enter" key, you can find the code and it is showed on LCD. After 5 seconds it returns time.

3, Check carefully that there is no remora between remote controller and Air conditioner when the time on/off doesn' t work. Because the operation is effective only when the air conditioner receives the timer on/off signal from remote controller.

4. The manufacturer keeps the right to change the parameter and function of product.

Controllable distance: larger than 26 ft

Battery type: AAA

Dimensions: 5.7" long x 2.16" width x 0.63" depth